
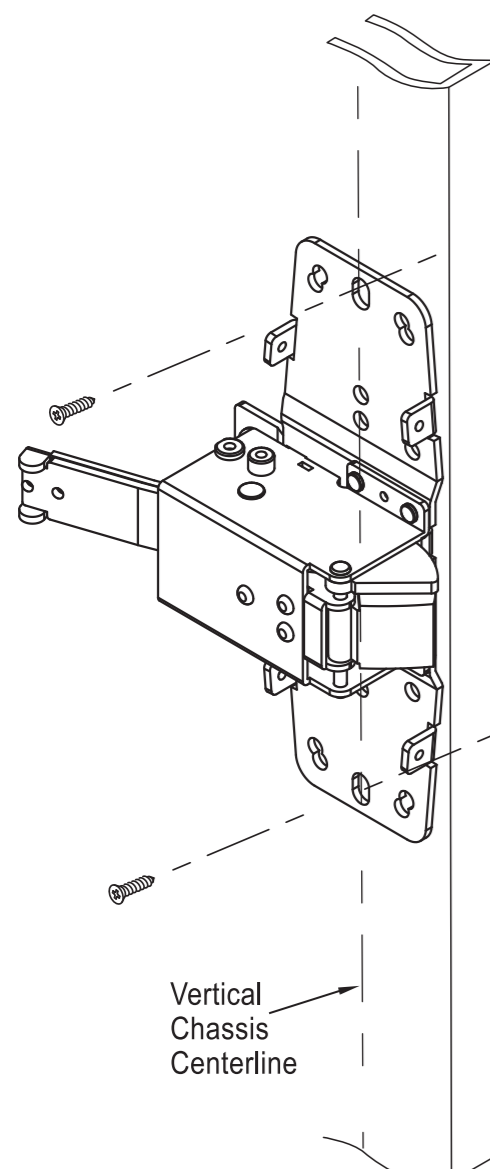
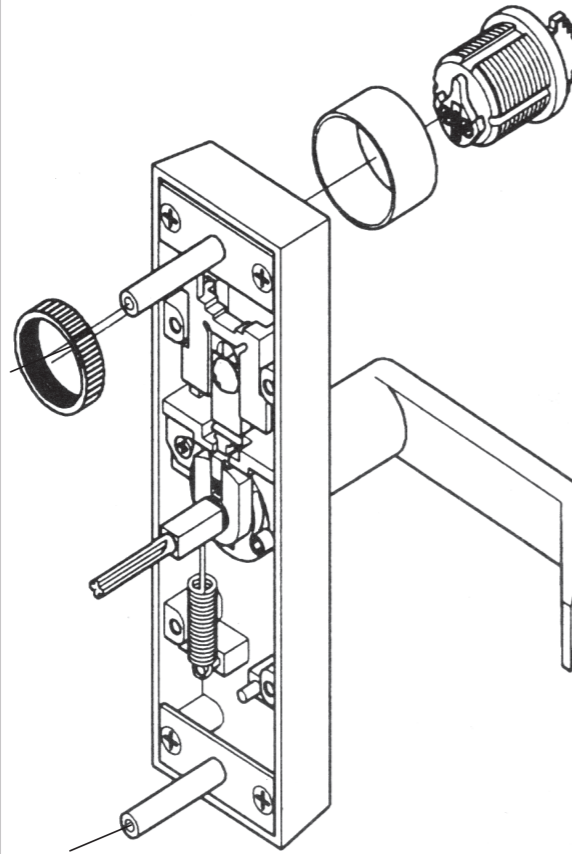
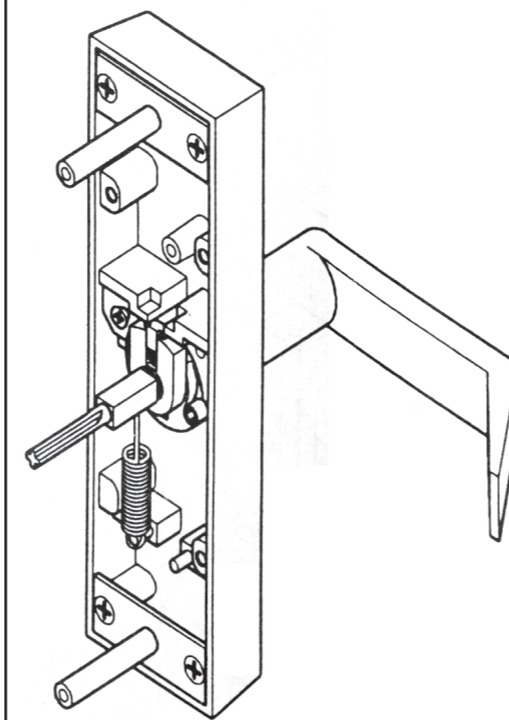
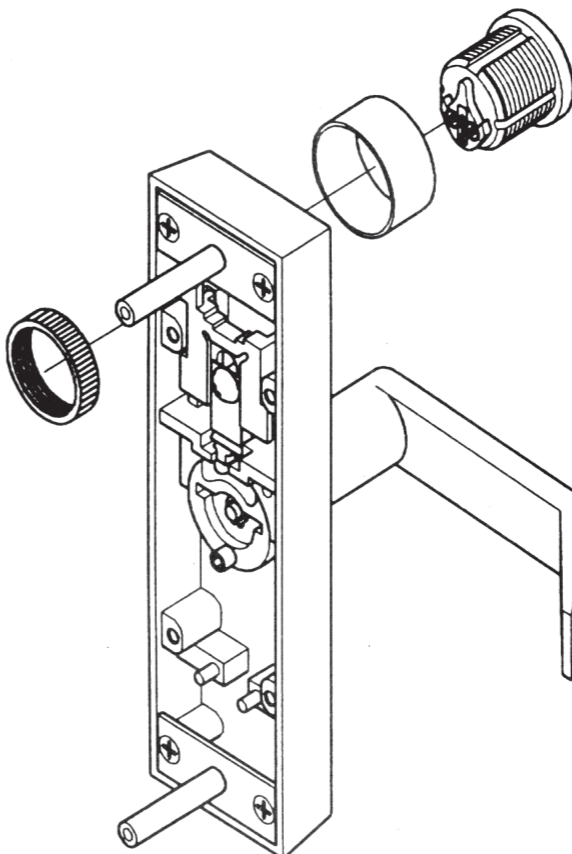


INSTRUCTIONS FOR ETL ESC LEVER TRIM FOR EDR701 / EDV701 Series Rim and Vertical Rod Device

	ETL	ETL BE	ETL DT	ETL NL
 <p style="text-align: center;">Vertical Chassis Centerline</p>	 <p style="text-align: center;">Lockable Esc Lever Trim. Key locks & Unlocks Lever</p>	 <p style="text-align: center;">No Cyl, Trim Always Operable</p>	 <p style="text-align: center;">Pull when Push bar locked down Dummy Esc Lever Trim</p>	 <p style="text-align: center;">Key unlock Esc Lever, key remained on Cyl unless Locked. Cyl Esc Lever Trim</p>
	13 function Entrance	15 function Passage	10 function Dummy	04 function Storeroom
	Attach the collar and mortise cyl to the esc case with mortise trim plate with the nut, attach case to door thru bolting (2) screws to the chassis, aligning spindle to hub.	Attach Esc case to door thru bolting the (2) screws to the chassis, aligning spindle to hub of the chassis.	Attach the collar and dummy cyl to the esc case with mortise nut, attach esc to door thru bolting (2) screws to the chassis.	Attach the collar and mortise cyl to the esc case with mortise nut, attach case to door thru bolting (2) screws to the chassis, aligning spindle to hub.

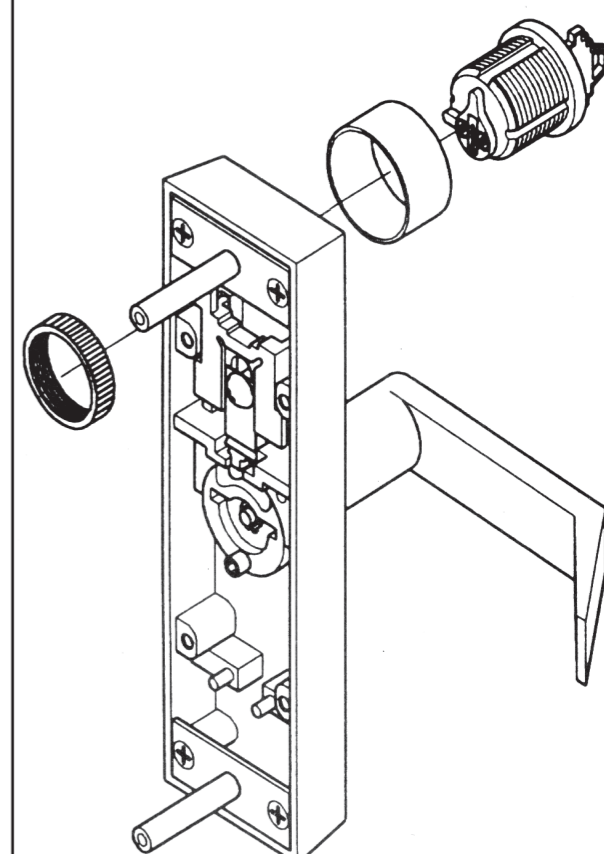